

Dustie

Dustie Air Sanitizer

瑞典 达氏空气消毒机

DMF115

Please read this operating manual,
Before using this product.

请在使用本产品前，阅读本操作手册

Version : 1152021V2

MobileFresh

Safety Instructions

- Please read the operating manual carefully before use and keep it properly for future reference.
- This manual is applicable to the DMF115. Please operate according to the instructions of the purchased model.
- When using electrical appliances, we should have basic safety knowledge to avoid fires, electric shocks and other injuries. You are expected to follow the instructions below.



Do not cover the surface of the product, to keep the surrounding air flowing in a relatively confined space.



Do not operate the product with wet hands. Do not wash the product directly with water.



It is forbidden to block the inlet and outlet with foreign objects.



It is forbidden to use the air sanitizer as a toy for children to play.



It is forbidden to have people or pets on site when the product working with alarm sounds.



Non-professionals or unauthorized repair personnel are not allowed to repair or modify the product by themselves.




It is forbidden to put the product in the freezer compartment.



Do not use this product while it is charging.

Take the air sterilizer out of the gift box and place it on a table or wardrobe, shoe cabinet, toilet, etc. Keep the inlet and outlet unobstructed when the product release ions, and facilitate air circulation.

Names of the parts

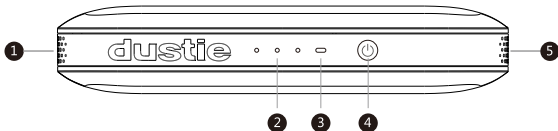

❶ Charging Port

❷ Battery Indicator

❸ Working Indicator

❹ Power Button (Regular Mode /Boost Mode)

❺ Air Outlet

Specifications

Proudct	Dustie Air Sanitizer	Battery capacity	650mAh
Model	DMF115	Range of working temperature	6~60°
Rated voltage	DC 5.0V	Charging line interface	Micro USB
Rated power	1.0W	Charging line length	300mm
Working principle	Ozone generator	Weight	90g
Applicable environment	Refrigerator/Shoe cabinet/ Wardrobe	Dimensions	113(L)*51.2 (W)*22 (H) mm

Product performance standards:

GB 4706.1-2005 Safety of household and similar electrical appliances-Part 1: General requirements 8/13/21

GB 4943.1-2011 Information technology equipment security-Part 1: General requirements Drop test

Operating Instructions

1 Product Operation

Place the machine smoothly in the location where disinfection is needed and ensure that it is used following the precautions on page 1.

2 Charging

You can charge the product with the plug of mobile phone charger. The first charge is guaranteed for 2-3 hours.(Note: do not use wet hands to plug the plug to avoid electric shock. When you move the machine, pull the plug).

3 Power ON/OFF

Normal mode: touch the power key lightly, the white work indicator is on, the product starts on the machine, touch lightly again, the product turns off.

Boost mode: press the power button for 3 seconds, the blue work indicator is on, the product enters the boost mode; Press the power button again to shut down the product.

4 Working Indicator

In normal mode, the work indicator light will flash. When the product is working, the work indicator light flashes quickly, blinking once per second. When the product is in standby, the working indicator flashes slowly, once every 2 seconds. In the powerful mode, the indicator light is fast flashing blue (once every second), and the work alarm and mysterious sound sound, reminding that the space is undergoing disinfection and deodorization, please leave temporarily for people, pets, etc.

Operating Instructions

5 Operating conditions

Normal mode: will work for at least 13 minutes every hour to maintain long-lasting deodorizing ability.
Boost mode: Uninterrupted work to ensure the best deodorizing ability.

6 Power Indicator

After the product is turned on, the normal power indicator light is turned on white; when the power is not enough, the red light is turned on, and the electric energy is not replenished in time. After flashing ten reminders, the machine is automatically turned off.

When the product is charged, the lights will flicker and light up in turn.



It is forbidden to have anyone or pets on the scene when the product operation prompt sounds.

Common Problems

Problem	Reason	Solution
Not Working	The battery is out of power. The power button has not been press into the right place.	Fully charged. Hold the power button and restart it.
Noise	There is dust in the outlet.	Remove the dust and restart.
Deodorizing No effect	Deodorizing efficiency is low. Battery life has been achieved. The inlet is blocked by foreign matter. The use area exceeds the machine area.	Please make sure the space of the product is too large. Please replace the battery in time. Please remove foreign body from the inlet. Please use it in suitable area.

If you need additional help, please contact customer service hotline: 4009-21-3058.

安全重要提示

- 使用前请详细阅读本操作说明指示，并妥善保存，以便于日后参考。
- 本说明书适用于DMF115系列型号产品，请依照所购买机型操作。
- 当我们在使用电器用品时，应具备最基本的安全常识，以避免火灾，触电及其他伤害的发生。因此，请遵守以下指示。



产品表面请勿覆盖毛巾等物体，保持机器周围空气畅通，并处于一个相对密闭的空间环境内进行使用。



请保持双手干燥时使用本产品，禁止用液体直接清洗本产品。



禁止遮挡进出风口并保持畅通。



禁止将本产品作为玩具提供给儿童玩耍。



禁止在产品运行提示声响时有人、宠物在现场。



非专职人员或未授权修理人员，不得自行维修或改造本产品。




禁止将产品置入冰箱冷冻室内。



不可在充电的状态下使用本产品。

将空气消毒机从包装盒中取出，可置于衣橱、鞋柜、浴室及冰箱等需要消毒的环境内。产品进出风口避免有异物堵塞，请保持本产品释放顺畅，利于空气循环。

部品名称

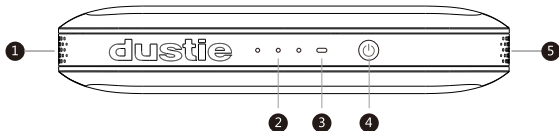

① 充电端口

② 电池容量提示灯

③ 工作指示灯

④ 电源开关 (普通模式 / 强力模式)

⑤ 出风口

产品规格

品名	空气消毒机	电池容量	650mAh
型号	DMF115	工作温度范围	6~60°
额定电压	DC 5.0V	充电线接口	Micro USB
输出功率	1.0W	充电线长度	300mm
工作原理	臭氧	产品尺寸	113(L)*51.2 (W)*22 (H) mm
适用环境	冰箱/鞋柜/衣橱	重量	90g

产品执行标准：

GB 4706.1-2005 家用和类似用途电器的安全 第 1 部分: 通用要求 8/13/21

GB 4943.1-2011 信息技术设备 安全 第 1 部分:通用要求 跌落测试

产品操作指南

1 产品操作

将产品平稳地放置于需要消毒的空间环境内，并确保遵循安全重要提示使用。

2 电源补充

可以使用包装盒内置充电线为本产品进行充电。首次使用请先充电2~3小时。

注意：请保持双手干燥时使用本产品、插拔插头，以避免触电。移动机器时，请移除电源插头。

3 电源开/关

常规模式：轻触电源按键，白色工作提示灯点亮，产品开机并开始运行；

再次轻触电源按键，产品关机停止运行。

强力除味模式：在关机状态下，长按电源键3秒，蓝色工作提示灯点亮，产品进入该模式开始运行；

再次轻按电源键，产品关机停止运行。

4 运行指示

普通模式，工作指示灯会闪烁，产品在工作时，工作指示灯是快闪，每秒闪烁一次。产品在待机时，工作指示灯是慢闪，为2秒钟闪烁一次。

强力模式，此时指示灯为蓝灯快闪（每秒钟一次），工作警报和玄音响起，提醒此空间正在进行消毒除味，请人、宠物等暂时离开。

产品操作指南

5 运行工况

普通模式：每小时均会工作至少13分钟,以保持长效的除味能力。

强力模式：不间断工作，保证最佳除味能力。

6 电量指示灯

产品开机后,正常电量指示灯亮白光;电量不足时亮红光,同时没有及时补充电能,闪烁十下提醒后,自动关机
当产品充电时，灯会闪烁并依次点亮。



禁止在产品运行提示声响时有人、宠物在现场。

常见问题

故障	原因	解决方案
产品无响应	电池耗尽 电源开关未按到位	将产品充电至饱和 按住电源键重新启动产品
噪音提升	离子释放刷有异物阻挡	排除异物并重启产品
除味效果不明显	除味效率低 电池寿命已达临界值 进出风口被衣物阻塞 在过大的空间内使用	请确认产品的使用空间是否过大 请及时更换电池 请移除进出风口之异物 请在适用面积内适用

如果您需要其他帮助, 请拨打消费者服务专线: 4009-21-3058.

有害物质声明

部件名称 Unit Name	有害物质及其化学元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁺⁶)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB基板组件	X	X	○	○	○	○
PCBA焊点	X	○	○	○	○	○
元器件（含模块）	X	○	○	○	○	○
金属部件	○	○	○	○	○	○
塑胶部件	○	○	○	○	○	○
纸质配件	○	○	○	○	○	○
配线线材	○	○	○	○	○	○

本声明依据SJ/T11364规定编制

“○”表示该有毒有害物质在该部件所有均质材料中含量均在GB/T26572规定之限量要求以下。

“x”表示该有毒有害物质至少在该部件的某一均质材料中含量超出GB/T26572规定之限量要求以下。

保修条款说明

在正确使用方式下，自购买日期起12个月内，如因制造商的瑕疵而发生故障则免费维修。

- * 一切人为损坏、天灾、地震、不在保证范围内。
- * 产品保修期内，若需要维修，请拨打客户服务热线：4009-21-3058
- * 若超过保修期限，则需酌收维修检测费用。
- * 请妥善保存购机凭证，例如订购单、送货单等。

以下情况恕不保修：

- * 无有效凭证。
- * 非本公司指定维修部维修而自行拆装修理引起的损坏。
- * 跌落或使用不当造成损坏。
- * 耗材类不在保修范围内，例如灯管、电池等。

在实施本公司保修标准过程中，我司保留以上条款的解释权。

当您在接受或需要服务时有不明之处，请咨询我司客户服务热线。

*保修服务区域仅限中国（不包括港、澳、台地区）。

*服务咨询如有改动，本公司恕不另行通知并保留最终解释权。

消费者保修卡 / Warranty Card

Name

姓名

Mobile

行动电话

Address

住址

E-mail

电子邮箱

Date of Purchase

购买日期

Y

年

M

月

D

日

Product ID

机身编码